

Quick Start Guide

PowerXL™

products that excel

INDOOR GRILL & GRIDDLE

See owner's manual for complete instructions and important safety information before using this product.

STEP 1



Disassemble the packed parts and remove all packaging materials.

STEP 2



Place the Drip Tray in the Base.
(see reverse side for detailed instructions).

STEP 3



Place the Reversible Grill/Griddle Plate in the Base with the side you want to use facing up.

STEP 4



Set the Temperature Control Dial to the off ("O") position. Insert the Temperature Control Dial fully into the Temperature Control Dial Socket. Then, plug the appliance into a power outlet.

STEP 5



Turn the Temperature Control Dial to your desired temperature setting by turning the dial clockwise. The indicator light on the Temperature Control Dial will illuminate. Allow the appliance to heat up. The indicator light will turn off when the appliance is ready to cook food.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

Assembly

SAVE THESE INSTRUCTIONS



1. Place the Drip Tray in the Base.
2. Place the Reversible Grill/Griddle Plate in the Base with the side you want to use facing up.