

# Quick Start Guide

## AIR FRYER

# PowerXL™

products that excel

## AIR FRYER PRO OVEN

See owner's manual for complete instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the appliance.

### STEP 2



Arrange food on Crisper Trays and place the Crisper Trays inside the appliance.

### STEP 3



Select one of the one-touch cooking presets to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

### STEP 4



After the set cooking time has expired, check the food and remove the food using oven mitts. The fan will run for 20 seconds to cool down, and the appliance will automatically shut off.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).

# Quick Start Guide

## ROTISSERIE

# PowerXL™

products that excel

## AIR FRYER PRO OVEN

See owner's manual for complete instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Carefully poke the Rotisserie Shaft through your food. Secure your food with the Rotisserie Forks and place the Rotisserie Shaft inside the appliance. For detailed instructions, please see the owner's manual.

### STEP 2




Press the Power/Start-Stop Button to turn on the appliance.

### STEP 3



Select the Rotisserie preset to begin the cooking cycle. If using manual settings, select the time and temperature and then press the Power/Start-Stop Button.

### STEP 4

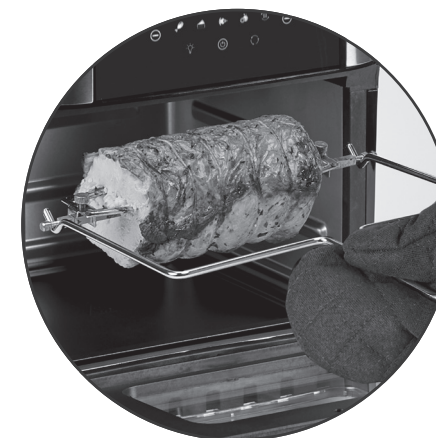

After the set cooking time has expired, check the food and remove the food using oven mitts. The fan will run for 20 seconds to cool down, and the appliance will automatically shut off.

Unpack all parts from the box and wash with warm, soapy water before first use (only accessories are dishwasher safe).