

# Quick Start Guide

## **PowerXL™** products that excel **MICROWAVE AIR FRYER PLUS**

See owner's manual for complete instructions and important safety information before using this product.

### AIR FRY

#### STEP 1



##### Insert Food

Open the door and place the Baking Pan on the Glass Tray or on the Air Fry Rack. The Air Fry Rack can be flipped so that food can be placed closer or farther from the top heating element.

#### STEP 2



##### Set Cooking Mode

Close the door and press the Air Fry Function Button.

#### STEP 3



##### Confirm Settings

Use the Control Knob to adjust the cooking time and temperature to suit your recipe. Press the Control Knob to confirm the settings and begin the cooking process.

#### STEP 4



##### Remove Food

When the cooking cycle is complete, open the door and use oven mitts or potholders to remove your food from the appliance.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only the Glass Tray is dishwasher safe).

Read all instructions before using this appliance. Only use provided accessories or accessories described in the instruction Manual. Do not use air fryer accessories while using the microwave function. Inspect all accessories prior to use, and discard if damaged.

# Quick Start Guide

## **PowerXL**<sup>TM</sup> products that excel MICROWAVE AIR FRYER PLUS

See owner's manual for complete instructions and important safety information before using this product.

### MICROWAVE

#### STEP 1



#### Insert Food

Open the door and place your microwave-safe food container or chosen cooking accessory on the Glass Tray.

#### STEP 2



#### Confirm Settings

Use the Control Knob to adjust the cooking time to suit your recipe. Press the Control Knob to confirm the setting and begin the cooking process.

#### STEP 3



#### Remove Food

When the cooking cycle is complete, open the door and use oven mitts or potholders to remove your food from the appliance.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only the Glass Tray is dishwasher safe).

Read all instructions before using this appliance. Only use provided accessories or accessories described in the instruction Manual. Do not use air fryer accessories while using the microwave function. Inspect all accessories prior to use, and discard if damaged.