

Quick Start Guide

PowerXL products that excel **CONTACT GRILL PLUS**

See owner's manual for complete instructions and important safety information before using this product.

STEP 1



Ensure that the Drip Tray is in place. Close the lid and then plug the Power Cord into an outlet. The red Indicator Light will illuminate. Let the appliance preheat.

STEP 2



Once the appliance has preheated, the green Indicator Light will illuminate and cycle off and on to indicate that the appliance is maintaining its temperature.

STEP 3



Use the handle to open the lid and place your food on the Bottom Grill Plate. Close the lid and cook according to your recipe.

STEP 4



When your food is done cooking, use a plastic or wooden spatula to transfer the food to a plate or cutting board.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).