

# Quick Start Guide

## **PowerXL** *products that excel* **VORTEX CLASSIC AIR FRYER™**

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

### STEP 1



#### Remove Basket

Pull the Basket straight out.

### STEP 2



#### Load Basket

Ensure the Fry Tray is in place in the Basket. If not, place the Fry Tray in the Basket and push down. Arrange the food you are cooking on top of the Fry Tray.

### STEP 3



#### Return Basket to Appliance

Push the Basket straight in until it clicks.

### STEP 4



#### Power Appliance On

Set the time and temperature. Follow instructions specific to your recipe.

### STEP 5



#### Remove Basket

Set the Basket on a secure, heat-resistant surface. Use tongs to remove food.