

Quick Start Guide

AIR FRY

PowerXL
products that excel[®]
SMART MICROWAVE AIR FRYER PLUS™

See owner's manual for complete instructions and important safety information before using this product.

STEP 1



Ensure the Glass Tray is not placed inside the appliance. Place food on the Baking Pan or Crisper Tray. Slide the Baking Pan into the appliance. If you are using the Crisper Tray, place the Crisper Tray on the Baking Pan.

STEP 2



Press the Air Fry Button to set the appliance to air fry mode.

STEP 3



Use the Control Knob to adjust the cooking time and temperature to suit your recipe. Press the Control Knob to confirm the settings and begin the cooking process.

STEP 4



When the cooking cycle is complete, open the door and use oven mitts or potholders to remove your food from the appliance.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (**only the Glass Tray is dishwasher safe**).

Read all instructions before using this appliance. Only use provided accessories or accessories described in the instruction manual. **Do not use air fryer accessories while using the microwave function.** Inspect all accessories prior to use.

Quick Start Guide

MICROWAVE

PowerXL
products that excel[®]
SMART MICROWAVE AIR FRYER PLUS™

See owner's manual for complete instructions and important safety information before using this product.

STEP 1



Center the Glass Tray on the turntable on the bottom of the inside of the appliance. Place food in a microwave-safe container and place the container on the Glass Tray.

STEP 2



Press the Control Knob to microwave your food for 30 seconds. Pressing the Control Knob again during the microwaving process will add 30 seconds to the microwaving time.

STEP 3



When the cooking cycle is complete, open the door and use oven mitts or potholders to remove your food from the appliance.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (**only the Glass Tray is dishwasher safe**).

Read all instructions before using this appliance. Only use provided accessories or accessories described in the instruction manual. **Do not use air fryer accessories while using the microwave function.** Inspect all accessories prior to use.