


# Quick Start Guide

**PowerXL**  
CORDLESS DUOSEALER™

See owner's manual for complete instructions and important safety information before using this product.

## MAKING & SEALING A BAG FROM THE BAG ROLL


### STEP 1

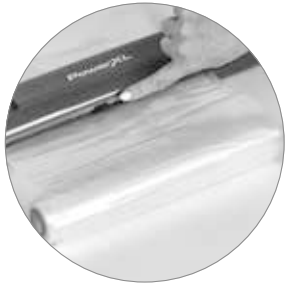

#### Cut a Bag to Size

Place the appliance on a level surface. With the Sealing Arm and Sealing Arm Securing Bar open, place the bag on the Sealing Platform. Align the bag with the Cutting Guides. Close the Sealing Arm and press down on the Sealing Arm near the Push-Open Latch until the Sealing Arm clicks into place. Slide the Slide Cutter Tab to cut the bag.

### STEP 2

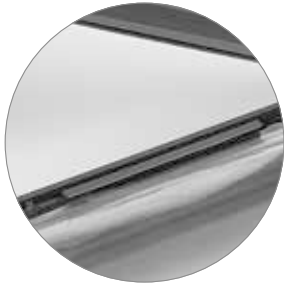

#### Seal One End

Plug the sealer into a power outlet. Open the Sealing Arm. Insert one end of the open bag into the sealer, aligning the bag under the Alignment Guide. Close the Sealing Arm and then the Sealing Arm Securing Bar. Press the Seal Only Button. The button will illuminate. When the bag is sealed, the light will turn off.

### STEP 3



#### Add Food

Open the Sealing Arm Securing Bar and then press the Push-Open Latch. Remove and add food to the bag, leaving at least 2 inches of free space at the top to allow for a proper seal. Return the bag to the Sealing Platform and align the bag with the Alignment Guide. Close the Sealing Arm and then the Sealing Arm Securing Bar.

### STEP 4



#### Vacuum and Seal

Press the Vacuum & Seal Button. When the bag is sealed, the light will turn off.  
**NOTE:** Do not use the Vacuum & Seal Button with foods containing a large amount of liquid. Instead, use the Seal Only Button.

### STEP 5



#### Remove Sealed Bag

Open the Sealing Arm Securing Bar and then press the Push-Open Latch to open the Sealing Arm and remove the sealed bag.

**IMPORTANT:** Unpack all parts from the box and packaging and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).