

Quick Start Guide

PowerXL™ LUMINEX™ LIGHT FRYER

See owner's manual for complete instructions and important safety information before using this product.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Check all packaging material thoroughly for accessories. Wash with warm, soapy water before first use (only some accessories are dishwasher safe).

STEP 1



Load Basket

Pull the Fry Basket out of the appliance. Ensure the Fry Tray has been placed in the Fry Basket. Place the ingredients inside the Fry Basket.

STEP 2



Return Basket to Appliance

Use the Handle to push the Fry Basket into the appliance.

STEP 3



Power Appliance On

Plug the appliance into a dedicated electrical outlet. Press the Power Button on the Control Panel. Use either a Cooking Preset Button or the Time and Temperature Control Buttons to set the appropriate time and temperature for your recipe.

STEP 4



Remove Basket

Pull the Fry Basket out of the appliance and place it on a heat-resistant surface. When removing food from the Fry Basket, avoid contact with hot excess oil or any hot cooking accessories. To avoid being burned, use silicone-tipped tongs or carefully tip the food out of the Fry Basket.