

PowerXL

Quick Start Guide

LUMINEX™ LIGHT FRYER

See owner's manual
for complete instructions and
important safety information
before using this product.

IMPORTANT: Unpack all parts from the box and remove any clear or blue protective film on the components. Check all packaging material thoroughly for accessories. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

STEP 1



Load Basket

Place the Fry Tray in the Basket. Arrange the food on top of the Fry Tray.

STEP 2



Return Basket to Appliance

Push the Basket straight in until it clicks.

STEP 3



Power Appliance On

Select a preset or set the time and temperature. Then press start ►II. Follow instructions specific to your recipe.

STEP 4



Remove Basket

Set the Basket on a secure, heat-resistant surface. Use tongs to remove food.